

Shelly components and their integration into the Solarwatt energy management system

Shelly offers a wide range of models and the various devices can take on a wide range of tasks in the system. This overview provides an introduction to the possible uses of the SOLARWATT Manager.

Shelly Pro 3EM

(up to three 120 A or 400 A current transformers)



- 3-phase energy meter for tophat rails (bidirect.)
- Measuring of up to 3 phases or consumers
- · WiFi, LAN

Function for Manager:

- Manager main meter or energy meter
- · Inverter meter

Shelly PM Mini Gen3



- Power meter for flush-mounted installation
- · Measuring of one consumer
- Max. 16 A, 240 VAC

Function for Manager:

- · Energy meter
- · Inverter meter

Shelly Pro (1PM, 2PM, 4PM)





- Power meter for top-hat rails
- Measuring and switching of 1, 2 or 4 consumers (1-phase)
- Max. 16 A/Chanel (Pro 1PM), total max. 25 A (Pro 2PM) resp. 40 A (Pro 4PM), 240 VAC
- WiFi, LAN

Shelly Plus (1PM, 2PM)



- Power meter for flush-mounted installation
- Measuring and switching of 1 or 2 consumers (1-phase)
- Max. 16 A/Chanel (Plus 1PM), max. 10 A/Chanel and total 16 A (Plus 2 PM), 240 VAC
- 10 A, 30 VDC
- WiFi

Shelly Plus Plug S UK




- Smart-Plug
- Measuring and switching of a consumer
- Max. 12 A (AC)
- WiFi
- Integrated LED light (can be switched off)
- Colored LED power consumption display

Shelly 1 Mini Gen3



- Switch for flush-mounted installation
- Switching of one consumer
- with potential-free contact for controlling e.g. SG Ready heat pumps
- Max. 8 A, 240 VAC
- Max. 5 A, 30 VDC

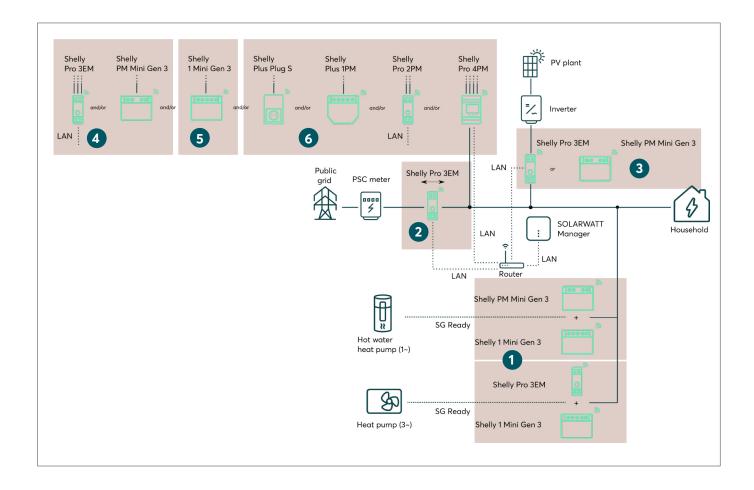

Use Cases for the SOLARWATT Manager:

- 1 as SG Ready connection
- 2 as main meter when there is no SOLARWATT Battery
- 3 as generation meter for measuring 1-ph. and 3-ph. inverters
- 4 as **energy meter for measuring** 1-ph. and 3-ph. consumers
- 5 as standalone smart plug for controlling individual consumers
- 6 as energy meter (for measuring) and smart plug (for controlling) 1-ph. consumers

Detailed information on connecting the individual Shelly products can be found in our online manual. <u>Click here</u> or scan the QR code!

